

Load 75 NIEDRIGE SEITENWÄNDE INNEN MY20 (VBK0281)

Die am Load nachrüstbaren niedrigen Seitenwände sind empfehlenswert, wenn Kindersitze montiert sind, vor allem in Kombination mit dem Regenverdeck.

Lieferumfang

- 2x niedrige Seitenwand innen
- 12x Senkkopfschraube (Torx M 5 x 25 mm DIN 965 A2)
- 12x Unterlegscheibe (M8 DIN 988 A2, brüniert)

Seitenwände montieren

1. Seitenwände an den Innenseiten der Ladefläche platzieren.
2. Unterlegscheiben ^② auf Schrauben ^① schieben. Schrauben ^① durch Löcher in den Seitenwänden stecken und einige Umdrehungen einschrauben.
3. Seitenwände korrekt ausrichten und Schrauben festziehen **Anzugsmoment 3 bis 5 Nm**.

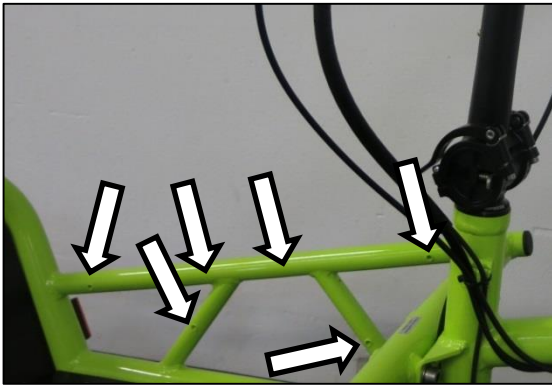


Abb. 1: Innenseite Ladefläche

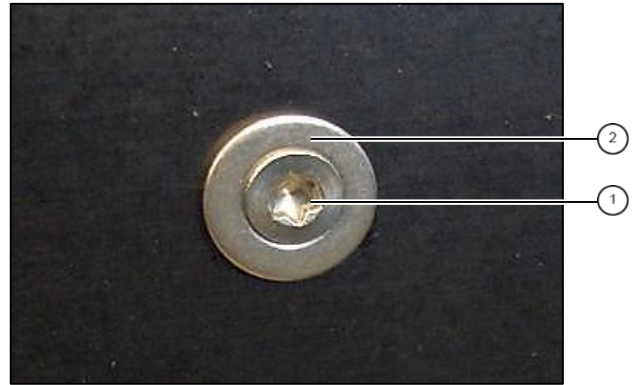


Abb. 2: Verschraubung

Load 75 LOW SIDE ELEMENTS INSIDE MY20 (VBK0281)

The low side elements are recommended in combination with child seat and child cover.

Scope of Delivery

- 2x low side elements inside
- 12x countersunk screw (Torx M 5 x 25 mm DIN 965 A2)
- 12x washer (M8 DIN 988 A2, gunmetal finished)

Mounting the side elements

1. Place side elements at inner sides of the front frame.
2. Stick washers ^② onto screws ^①. Stick screws ^① through holes of the side elements and turn them in carefully by hand.
3. Adjust side elements and tighten screws ^①.

Tightening torque 3 up to 5 Nm.

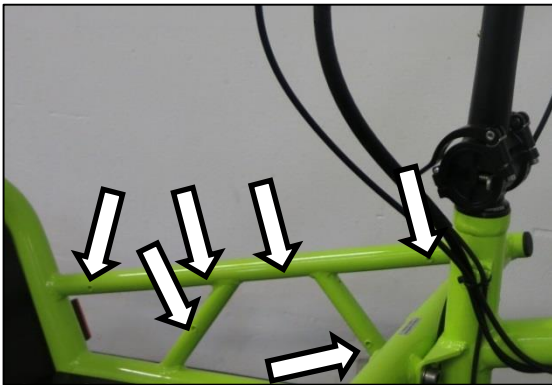


fig. 1: inner side of front frame

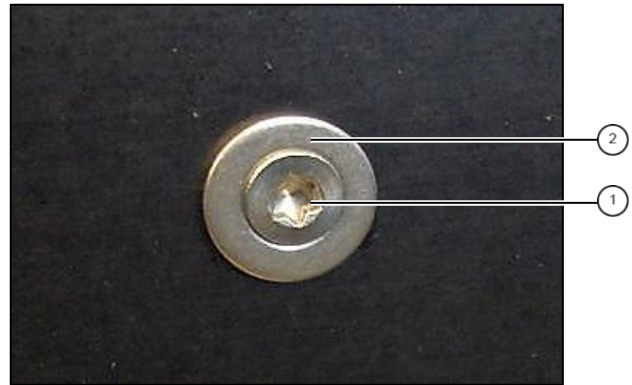


fig. 2: washer and screw