

Load 75 MY20 SEITENWÄNDE HOCH (VBK0282)

Die am Load 75 ab Modelljahr 2020 nachrüstbaren hohen Seitenwände sind notwendig, wenn die Persenning (VBK0236) verwendet wird.

Lieferumfang

- 2x Seitenwand hoch
- 1x Cargo-Rückwand
- 6x Rundknopf
- 6x Thermoplastschraube (5 x 20 mm A2)
- 12x Senkkopfschraube (Torx M5 x 25 DIN 965 A2, brüniert)
- 2x Senkkopfschraube (M10 x 20 A2)
- 12x Unterlegscheibe (M8 DIN 988 A2, brüniert)

Seitenwände montieren

1. Rundknöpfe ④ auf Thermoplastschrauben ⑤ stecken und Thermoplastschrauben ⑤ gemäß Abb. 1 in Seitenwände schrauben.
- ❗ **Achtung:** Schrauben nicht schief eindrehen und nicht zu stark anziehen.
2. Seitenwände mit nach außen zeigenden Rundknöpfen an Innenseiten der Reling platzieren.
3. Unterlegscheiben ② auf Senkkopfschrauben ① schieben. Senkkopfschrauben durch Bohrungen ③ der Seitenwände stecken und locker in die Gewinde in der Reling drehen.
4. Seitenwände ausrichten und alle acht Senkkopfschrauben ① festziehen.
Anzugsmoment 3 bis 5 Nm.
5. Cargo-Rückwand ⑥ mit Senkkopfschrauben ⑦ montieren (siehe Abb. 3).

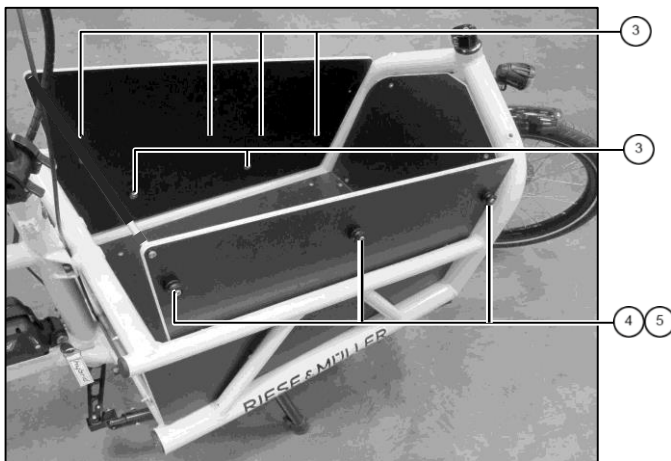


Abb. 1: Seitenwände montieren

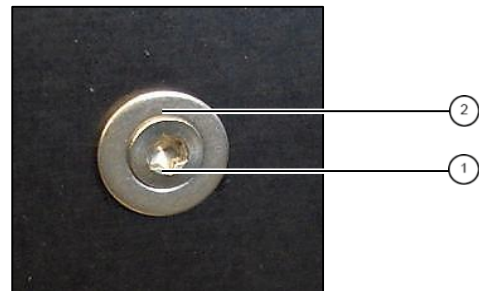


Abb. 2: Verschraubung

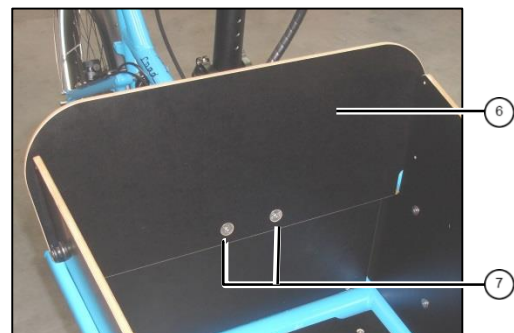


Abb. 3: Cargo-Rückwand

Load 75 HIGH SIDE WALLS (VBK0234)

The optional high side walls are necessary if the tarpaulin (VBK0236) is used.

Scope of delivery

- 2x high side wall
- 1x Cargo back wall
- 6x knob
- 6x Thermoplast screw (5 x 20 mm A2)
- 12x countersunk screw (Torx M5 x 25 DIN 985 A2)
- 2x countersunk screw (M10 x 20 A2)
- 12x washer (M8 DIN 988 A2)

Mounting the side walls

1. Stick Thermoplast screws ^⑤ into knobs ^④ and turn screws into the side walls as shown in fig. 1.
- ❗ **Attention:** turn in the screws orthogonal and do not tighten them to strong.
2. Place side walls at the front frame with knobs facing outside.
3. Stick countersunk screws ^① into washers ^②. Stick countersunk screws through the side wall holes ^③ and turn them loose into the front frame.
4. Adjust side walls and tighten all eight countersunk screws ^①.
Tightening torque 3 up to 5 Nm.
5. Install Cargo back wall ^⑥ with countersunk screws ^⑦ (see fig. 3).

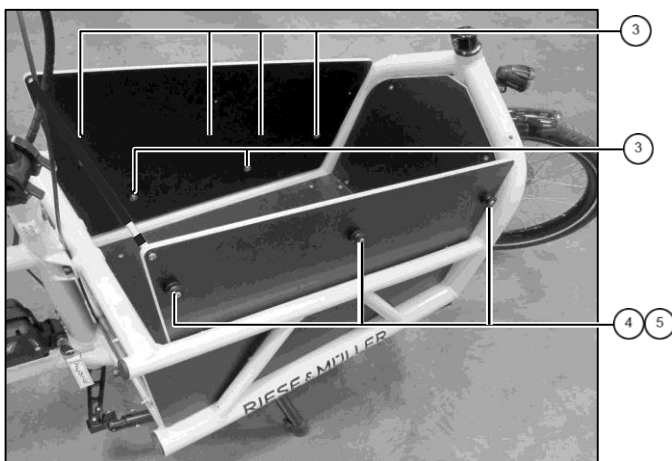


Fig. 1: mounted side walls

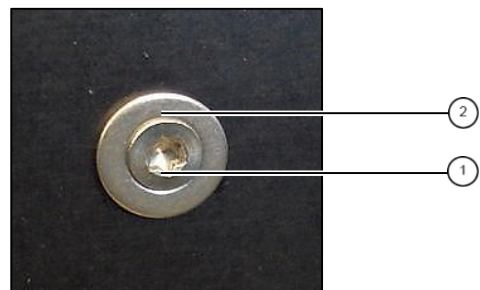


Fig. 2: countersunk screw with washer

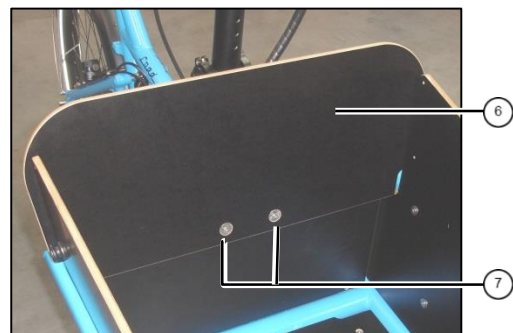


Fig. 3: Cargo back wall